



**Solvent Recycler
SR30 - 30V**

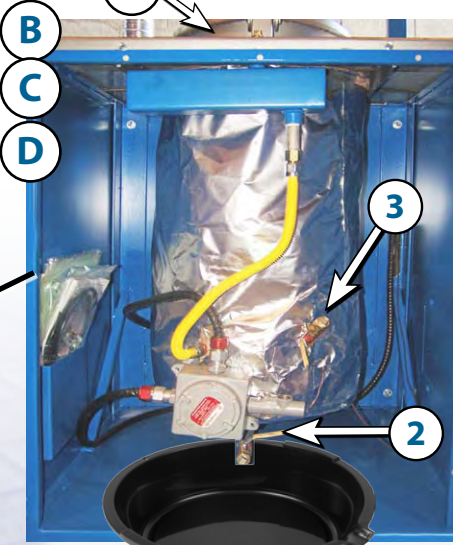


Oil pan

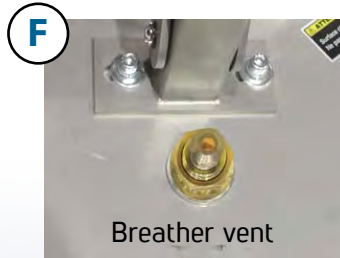

Breather vent



Cover seal

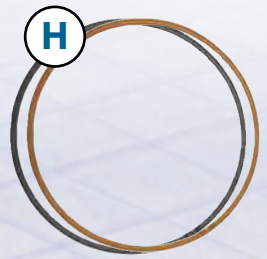

STEPS FOR OIL CHANGE PROCEDURE

| | |
|----------|---|
| A | Remove the breather vent #① and remove the ball valve #② plug and open the purging valve #②. |
| B | Place an empty oil pan below the ball valve #② and open the valve to purge the used oil. |
| C | When empty, close the ball valve #②, remove the container and screw back the plug on the ball valve #②. |
| D | Remove the plug and open the ball valve #③. |
| E | Insert a funnel in breather vent hole #① and pour new thermic oil until full. Oil level must be around 1" in the overflow tank. Verify with a dipstick. |
| F | Close the ball valve and screw back the plug #③, and the breather vent #①. |

Change the oil every 2000 hours of work or once a year whichever comes first. (Recommended)

| # | Description | Part number |
|----------|----------------------------|-------------|
| G | Oil 2.5 gal / 10 L | 330067 |
| H | Orange or black cover seal | 304018 |